




Z888-12 BEDDING BRACKET INSTALLATION

Dimensional data (inches and [mm]) are subject to manufacturing tolerances and change without notice.

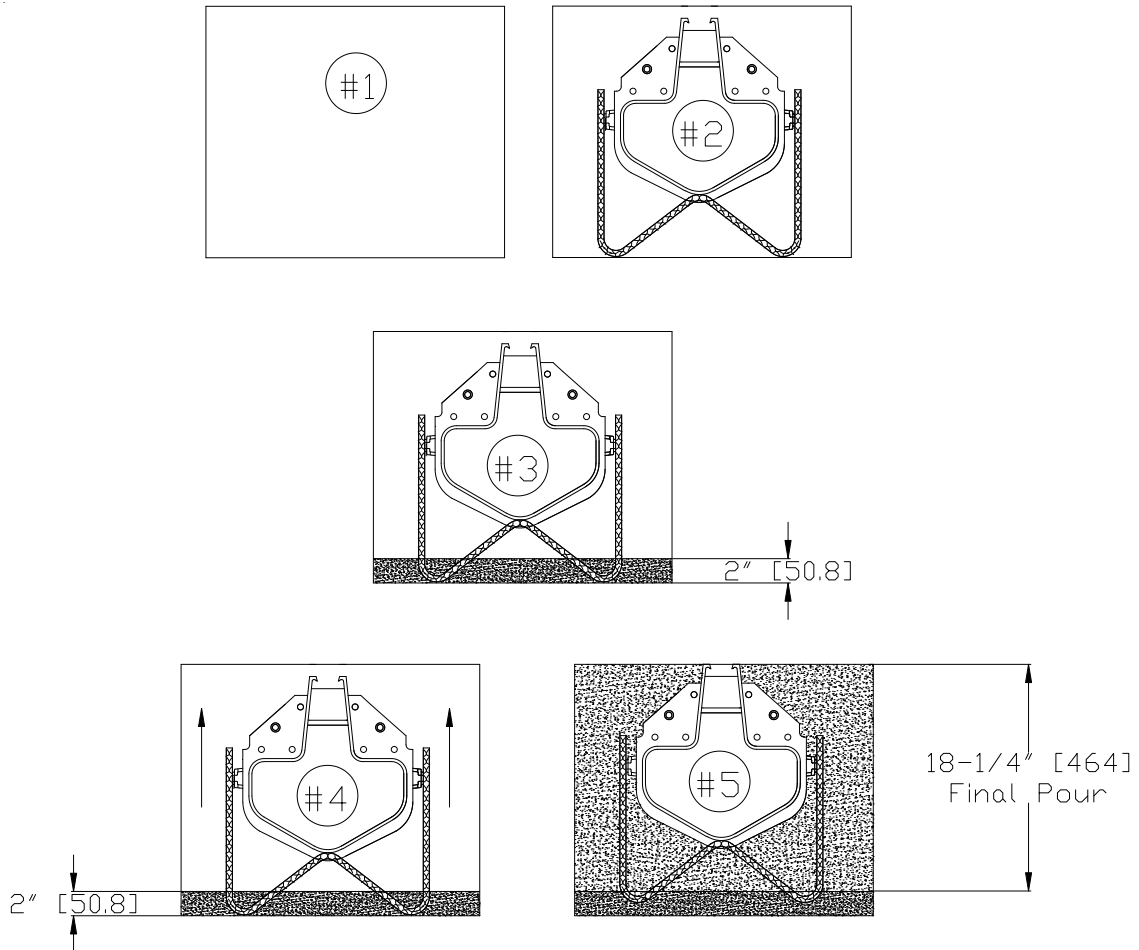

Steps for Installation:

1. Excavation must be dug 1" [25mm] deeper than specified minimum concrete encasement.
2. Place trench with bedding brackets, rebar, frames, and/or anything that is required for that specific application.
3. Pour 2" [50.8mm] bedding layer of concrete. Let pour set.
4. Adjust using rebar clip for finish grade alignment.
5. Make final pour to top of trench per system submittal.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

*Regularly furnished unless otherwise specified.

Zurn Industries, LLC | Specification Drainage Operation
1801 Pittsburgh Avenue, Erie, PA U.S.A. 16502 · Ph. 855-663-9876, Fax 814-454-7929
In Canada | **Zurn Industries Limited**
3544 Nashua Drive, Mississauga, Ontario L4V 1L2 · Ph. 905-405-8272, Fax 905-405-1292
www.zurn.com

Rev. A
Date: 6/11/2018
C.N. No. 140145
Form No. FT795