



TYPICAL SHOWER INSTALLATION FOR Z187 OBLIQUE SCUPPER DRAIN

Dimensional Data (inches and [mm]) are Subject to Manufacturing Tolerances and Change Without Notice

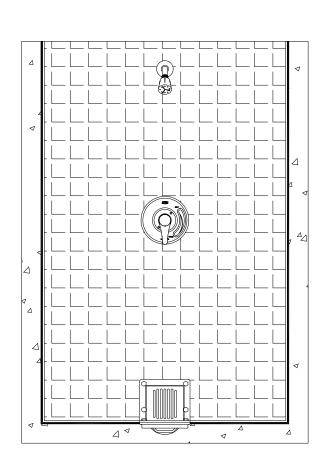

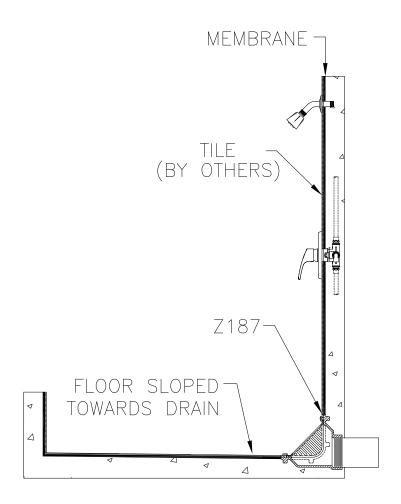

Z187 OBLIQUE SCUPPER DRAIN

Drain is illustrated in a shower floor application. Dimensional data is shown in the Engineering Handbook and on the Zurn submittal drawings. The drain body is secured to the pipe by a threaded connection or a no-hub connector. The type of connection must be specified upon ordering. The waterproofing membrane is to run up to and over the clamping flange area. The clamping collar is then placed on the drain and then secured. The design and method used for the installation of flooring materials is by others. For other available scupper drains, see Z189

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation

1801 Pittsburgh Avenue, Erie, PA U.S.A. 16502 · Ph. 855-663-9876, Fax 814-454-7929

In Canada | Zurn Industries Limited

3544 Nashua Drive, Mississauga, Ontario L4V 1L2 · Ph. 905-405-8272, Fax 905-405-1292

Rev. A

Date: 04/06/2018 C.N. No. 139850

Form No. RD74

Page 1 of 1