



ZPT1

ZURN POD PRO® SHALLOW LINEAR FLOOR DRAIN WITH CLAMPING FRAME & DROP-IN OUTLET INSTALL INSTRUCTIONS


Design and Dimensional Data (inches and [mm]) are Subject to Manufacturing Tolerances and Change Without Notice

Drain Installation

Note: Please visit Zurn.com for floor cutting template in .dxf format.

1. Cut slot in floor between 2.63"-2.75" wide by the length of grate + .25". Cut a hole for outlet 3.5" in diameter, or 3.5"x3.5" square. (Figure 1)

Note: Grate and shipping cover not shown. Shipping cover must be kept in place until outlet install.

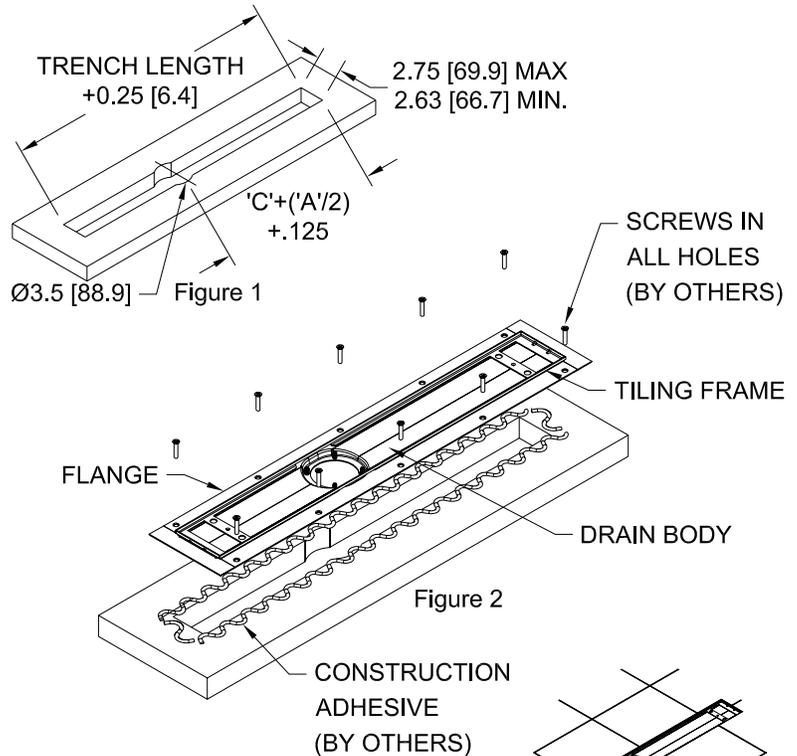


2. Set drain body into slot and ensure membrane flange lays flat on floor. Attach body to floor with construction adhesive and corrosion resistant #8 countersunk screws (provided by others). If installed in metal floor, flooring must be countersunk. Ensure all body lockdown holes are utilized, taking care to not warp flange when tightening screws (Figure 2). Wipe away all excess adhesive and ensure body and floor are clear of debris.

3. Install waterproofing membrane per manufacturer's instructions, ensuring membrane lays fully flat and is properly sealed to body, especially between the body lockdown holes and tiling frame. (Figure 3) Ensure membrane extends to tiling frame. (Figure 5).

4. Install finished flooring, ensuring no construction material or debris gets into drain. (Figure 4)

5. Remove grate. Seal gap between tiling frame and tiles with caulk/grout, making sure no caulk/grout enters drain or adheres to grate seat. Wipe body and floor clean of all excess caulk. Remove screws from bag taped to crossbar. While leaving the outlet cover in place, set grate into drain and lockdown with screws from bag once caulk/grout had dried. (Figure 5)

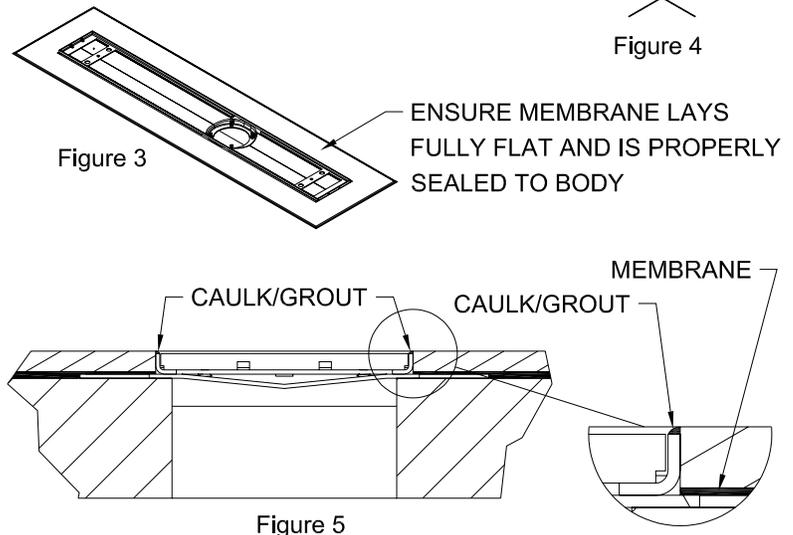

6. Place outlet box into POD for shipping or palletize as necessary.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation
1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited
7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

www.zurn.com

Rev.	B
Date:	11/25/2022
C.N. No.	144898
Patent	zurn.com/patents
Prod. Dwg. No.	FD135

Page 1 of 2



ZPT1

ZURN POD PRO® SHALLOW LINEAR FLOOR DRAIN WITH CLAMPING FRAME & DROP-IN OUTLET INSTALL INSTRUCTIONS

Design and Dimensional Data (inches and [mm]) are Subject to Manufacturing Tolerances and Change Without Notice

Outlet Installation

Note: Ensure steps 1- 6 of Drain Installation are completed before continuing.

- 7. Once POD is set in place at job site, open outlet box and remove components.
- 8. Cut outlet pipe to required length prior to installing into drain. Ensure all sharp edges are deburred.(Figure 6)

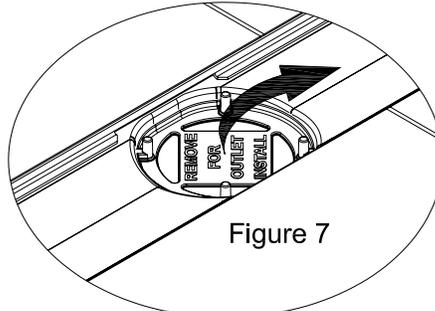


Figure 7

- 9. Remove grate and set aside.
- 10. Remove shipping cover, confirming there is no debris on gasket face. (Figure 7)

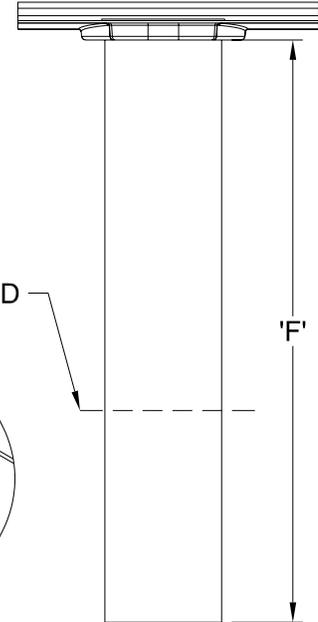


Figure 6

- 11. Place gasket on body over all 4 studs with rib facing up, ensuring gasket lays flat with no wrinkles. Ensure proper orientation. (Figures 8)

(4x) STUDS

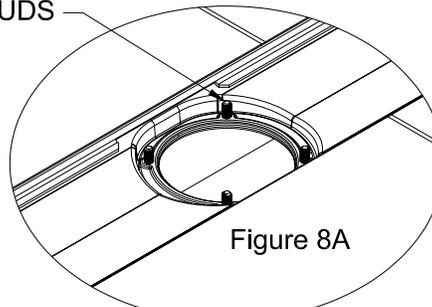


Figure 8A

CUT WHERE DESIRED

- 12. Lower outlet through gasket, gently rotating outlet left to right while sliding outlet down ensuring gasket does not pinch in gap with body. Align holes in outlet flange to studs, taking care to not bend or damage studs/threads.

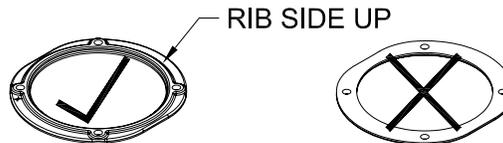


Figure 8B

Figure 8C

- 13. Thread all 4 nuts onto the studs hand tight.

- 14. Continue to tighten all 4 nuts incrementally in a star pattern until torqued to 20-25in-lbs. (Approximately two finger tight with open ended 11/32" wrench.)

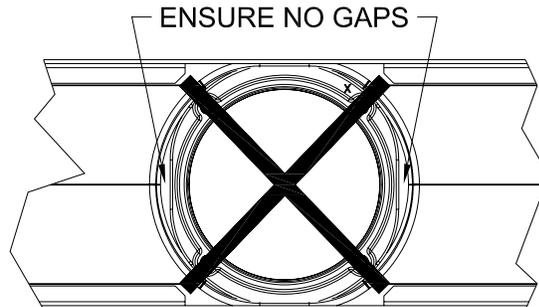


Figure 8D

- 15. Remove outlet label and discard. Connect outlet to building plumbing. Once connected, double check nuts are torqued per step 14.

- 16. Place grate back into trench and reinstall lockdown screws, tightening to 10-15in-lbs.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov
⚠ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov
⚠ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation
1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited
7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

www.zurn.com

Rev.	B
Date:	11/25/2022
C.N. No.	144898
Patent	zurn.com/patents
Prod. Dwg. No.	FD135

Page 2 of 2