

Determine the height and measure where you wish to locate the waste line sleeve on both uprights See Fig. 1

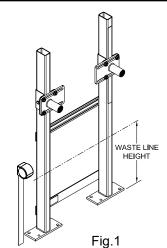


2. Remove screws from the cross bars. Set all of the screws (6) and the cross bars (2) aside, for re-assembly later. See Fig. 2

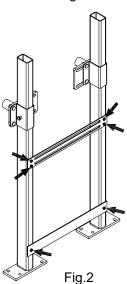

Note: Repeat Steps 3 through 10 for both uprights

3. For both uprights.

Transfer the measurement on to both uprights. Use a square and scribe cut line(s) onto and/or all around the uprights. See Fig. 3

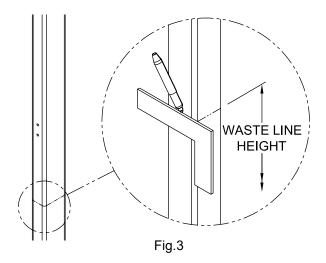

⚠ **WARNING:** Cancer and Reproductive Harm - <u>www.P65Warnings.ca.gov</u>

ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation 1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited

7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

Rev. C

Date: 12/30/22 C.N. No.144897

Patent zurn.com/patents

Prod. | Dwg. No. C67 Page 1 OF 5

ZURN WALL-HUNG LAVATORY ADJUSTABLE CARRIER WITH WASTE LINE SLEEVE INSTALLATION INSTRUCTIONS

4. For both uprights.

Use appropriate saw and cut uprights into two pieces. The saw cut must be square on the uprights. Remove any burrs which may remain. See Fig. 4

5. For both uprights.

Keep the two cut pieces of the upright together in matched sets ("top piece" and "bottom piece"). This will assure that the overall height of the upright is correct if several uprights are cut at different locations. See Fig. 5

6. Using the provided template, line up the "Cut Line" with the cut edge of the bottom piece, and using a marking punch tool, mark the two "Hole Locations" provided on the template. Using a 1/2" drill bit, drill through both walls of the upright, ensuring the holes remain perpendicular to the surface. Repeat the same process for the top piece. See Fig. 6

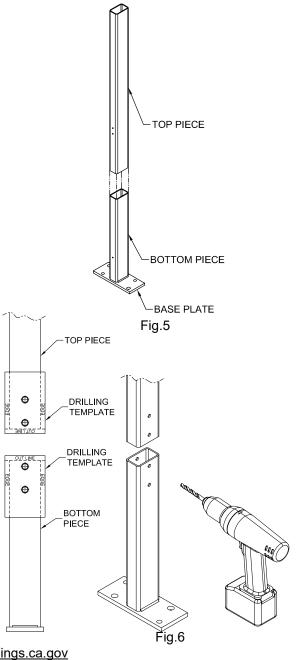


Fig.4

ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation 1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited

7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

Rev. C

Date: 12/30/22 C.N. No.144897

Patent zurn.com/patents Prod. | Dwg. No. C67

ZURN WALL-HUNG LAVATORY ADJUSTABLE CARRIER WITH WASTE LINE SLEEVE INSTALLATION INSTRUCTIONS

7. For both uprights.

Slide the waste line sleeve on to the bottom piece of the upright until the upright makes contact with the flange from the waste line sleeve.

Note: Position the sleeve so that the ARROW is pointing towards the front of the carrier. See Fig. 7

8. For both uprights


Use: (2) 3/8-16 Bolt

- (4) 3/8 Washer
- (2) 3/8-16 Nut

Slide one washer onto the bolt. Slide the bolt through one side of the hole, through the holes in the sleeve, and out of the opposing side. Use flat washer and nut and snug tighten only. Repeat for both holes. Note: Position the sleeve so that the ARROW is pointing towards the front of the carrier. See Fig. 8

9. For both uprights

Slide the top piece of the upright into the sleeve until the upright makes contact with the flange from the waste line sleeve. See Fig. 9

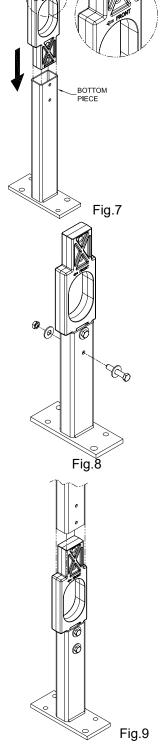

MARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation 1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited

7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

Rev. C

Date: 12/30/22 C.N. No.144897

Patent zurn.com/patents

Prod. | Dwg. No. C67 Page 3 OF 5

10. For both uprights


Use: (2) 3/8-16 Bolt


(4) 3/8 Washer

(2) 3/8-16 Nut


Slide one washer onto the bolt. Slide the bolt thru one side of the hole, through the holes in the sleeve, and out of the opposing side. Use flat washer and nut and snug tighten only. Repeat for both holes. See Fig. 10


11. Retrieve the cross bars and screws and reassemble the carrier. See Fig. 11



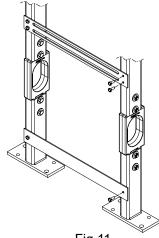

12. Position and set the carrier in the proper location and secure the uprights to the concrete floor using either 3/8 or 1/2 anchors (provided by others). See Fig. 12



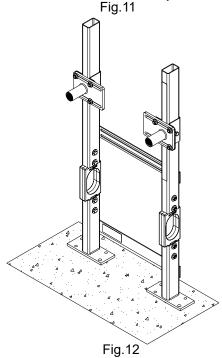

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation 1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited


7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

Rev. C

Date: 12/30/22 C.N. No.144897

Patent zurn.com/patents

Drilling Template Do Not Scale

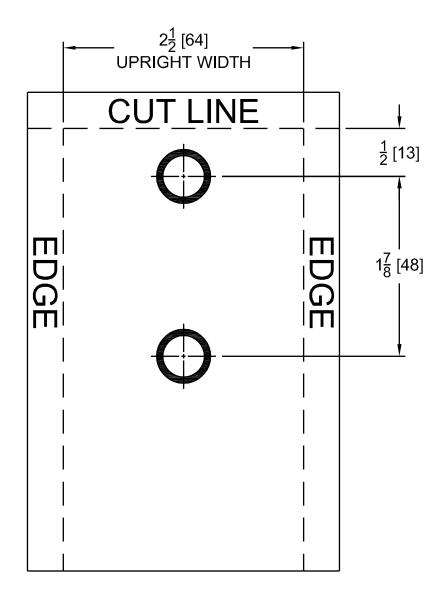

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation 1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited

7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

Rev. C

Date: 12/30/22 C.N. No.144897

Patent zurn.com/patents

Prod. | Dwg. No. C67