





Z1810

ADJUSTABLE DRAIN BODY O-RING INSTALLATION INSTRUCTIONS

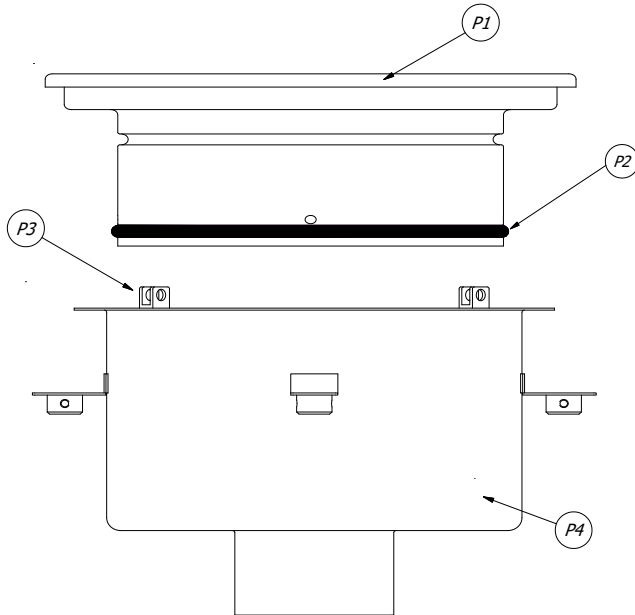

- 1) Remove components from packaging and confirm your order is complete.
- 2). Loosen clamps (P5) by loosening screws (P6) with an allen wrench.
- 3). Remove the upper body (P1) from the lower Body (P4).
- 4) Slip O-Ring (P2) onto upper body (P1), until it is "locked" into the lower groove.
- 3) Thoroughly lubricate the O-Ring (P2) with the lubricant provided, to allow for easier adjustment when installing.
- 4) Press the Upper Body (P1) into the Lower Body (P4) and adjust to desired height. Note: Make sure the finalized height is level and flush with the finished floor grade.
- 5) Re-tighten the Screws (P6) on each side of the clamps (P5) to secure the drain in place; eliminating any further movement.

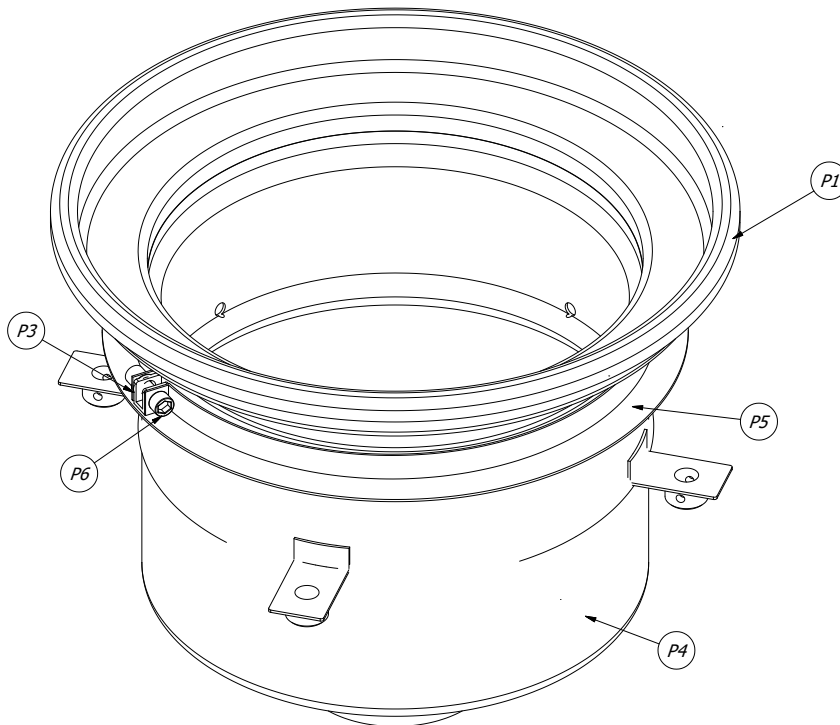

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov
⚠ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov
⚠ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation
1801 Pittsburgh Avenue, Erie, PA U.S.A. 16502 · Ph. 855-663-9876, Fax 814-454-7929
In Canada | Zurn Industries Limited
3544 Nashua Drive, Mississauga, Ontario L4V 1L2 · Ph. 905-405-8272, Fax 905-405-1292
www.zurn.com

Rev. A
Date: 4/24/2018
C.N. No. 139950
Form. No. SS6_Z1810