


**INSTALLATION INSTRUCTIONS FOR PIPE CLAMP TYPE AIR INLET STRAINER**


1. With the exception of the strainer and the strainer attachment nut, all pipe clamp hardware should be assembled as shown in the isometric assembly on Page 9.  
 Note that the 1/4" [6]-20 NC machine screw and nut which hold the anchor bars (in an "X" configuration) to the spade bolt **should not be tightened**. The nut should be run onto the machine screw until 4 or 5 threads of the machine screw are past the nut.
2. If necessary, back off the 3/8" [9]-16 NC nut on the spade bolt to allow the adjusting bar to move toward the end of the spade bolt, away from the anchor bars.
3. Push the legs of the anchor bars together, inward toward the spade bolt until the assembly can fit onto the pipe I.D.
4. Push the assembly into the pipe until the spade bolt sticks out of the pipe (which should be flush with the finished wall) by about 1/4" [6]. Slide the adjusting bar inward between the legs of the anchor bars at the same time making sure that the anchor bars are in line with one another and as close as possible to being on the pipe centerline.
5. Run the 3/8" [9]-16 NC nut on the spade bolt up against the adjusting bar and tighten. This will force the tips of the anchor bars into the pipe I.D.; tighten until well secured.
6. Slip the strainer over the end of the spade bolt and push against wall.
7. Tighten the strainer attachment nut to secure strainer in place.

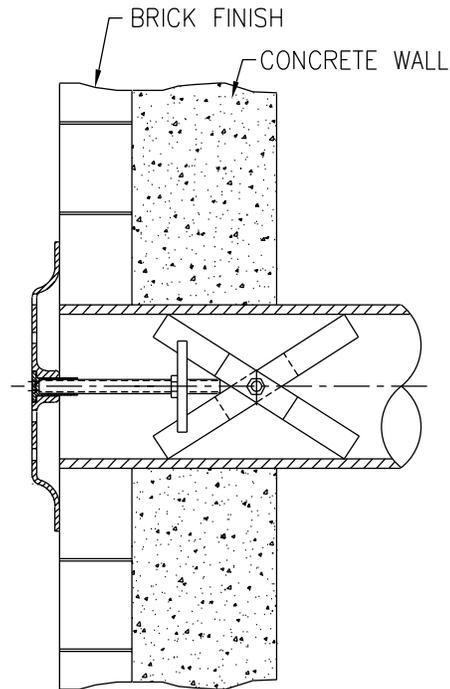

TYPICAL INSTALLATION USING PIPE CLAMP HARDWARE

**INSTALLATION INSTRUCTIONS FOR FLANGE MOUNTING HOLE TYPE AIR INLET STRAINER**

1. Obtain appropriate expansion anchors and screws for the type of wall construction strainer will be attached to. Note that the mounting holes in the strainer are 5/16" [8] diameter.
2. Locate the strainer on the wall, over the pipe as follows:
  - 2a. Determine the O.D. of the strainer, which will be either:  
 8" [203] for 3" [76] and 4" [102] pipe  
 12" [305] for 5" [127] and 6" [152] pipe  
 15" [381] for 8" [203] and 10" [254] pipe
  - 2b. Determine the I.D. of the pipe, which will be either:  
 3" [76], 4" [102], 5" [127], 6" [152], 8" [203], or 10" [254]
  - 2c. Subtract the pipe I.D. from the strainer O.D.  
 Example: 12" [305] strainer O.D. - 5" [127] = 7" [178]
  - 2d. Then divide the difference by 2 [51].  
 Example: 7" [178] ÷ 2 [51] = 3-1/2" [89]
  - 2e. Measure from the inside wall of the pipe and place a mark on the wall at 3-1/2" [89]. Do this in 4 places approximately 90° apart from one another.
3. Measure from one of the marks across to the other and you should have the strainer O.D. dimension.
4. Position the strainer within the 4 marks which should line up with the edge of the strainer O.D.
5. Hold the strainer in position and mark the flange mounting hole locations (2 places).
6. Remove the strainer, drill holes, and install expansion anchors (by others), following the anchor manufacturers instruction for hole diameter, depth, and installation.
7. Reposition strainer, align mounting holes with expansion anchors, and attach to wall with screws (by others).

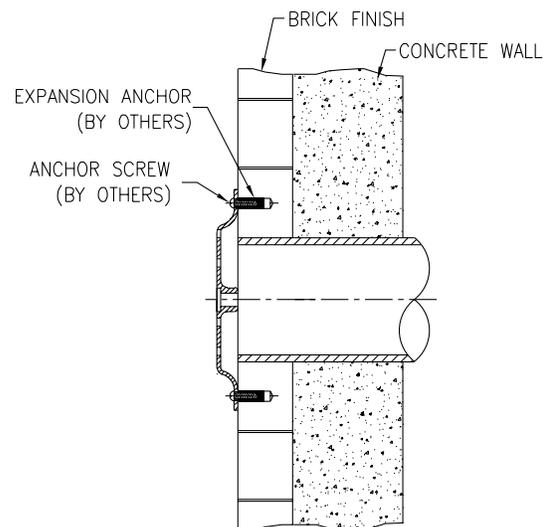

TYPICAL INSTALLATION USING FLANGE MOUNTING HOLES (-LC SUFFIX)