Z888-36

BEDDING BRACKET INSTALLATION

Dimensional data (inches and [mm]) are subject to manufacturing tolerances and change without notice.

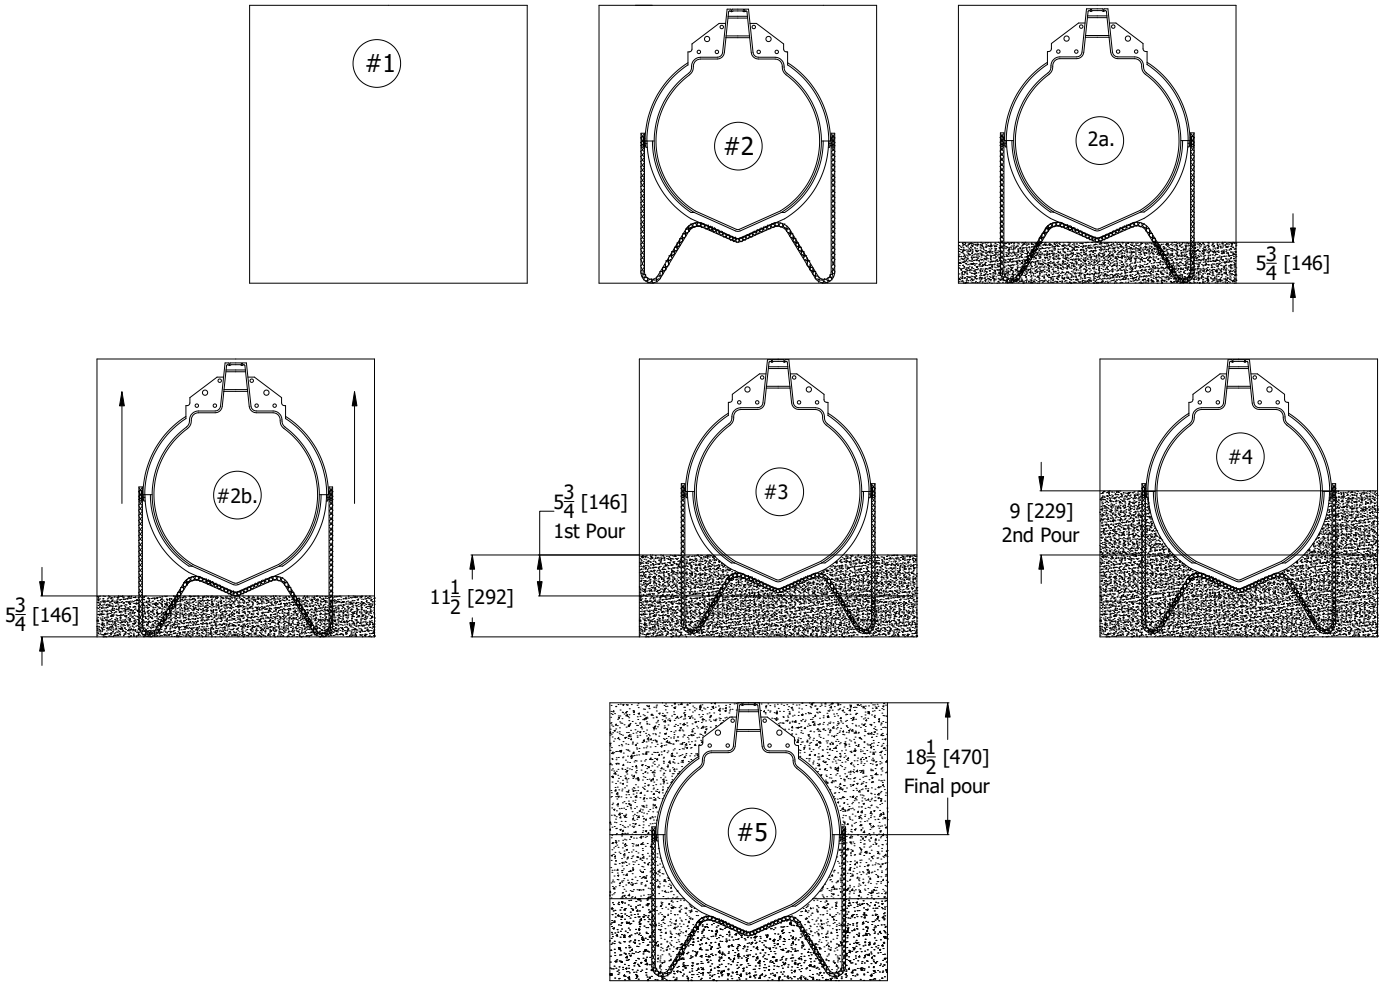

Steps for Installation:

1. Excavation must be dug 1” [25mm] deeper than specified minimum concrete encasement.

2. Place trench with bedding brackets, rebar, frames, and/or anything that is required for that specific application.
   a. Pour 5-3/4” [146mm] bedding layer of concrete. Let pour set.
   b. Adjust using rebar clip for finish grade alignment.

3. Pour first concrete layer 5-3/4” [146mm] to labeled level on trench (First Pour To This Line). Let concrete set.

4. Pour next concrete layer 9” [229mm] to labeled level on trench (Second Pour To This Line). Let concrete set.

5. Make Final Pour to top of trench per system submittal.

⚠**WARNING**: Cancer and Reproductive Harm - www.P65Warnings.ca.gov
⚠**ADVERTENCIA:** Cáncer y daño reproductivo - www.P65Warnings.ca.gov
⚠**AVERTISSEMENT:** Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

*Regularly furnished unless otherwise specified.

Zurn Industries, LLC | **Specification Drainage Operation**
1801 Pittsburgh Avenue, Erie, PA U.S.A. 16502 · Ph. 855-663-9876, Fax 814-454-7929
In Canada | **Zurn Industries Limited**
3544 Nashua Drive, Mississauga, Ontario L4V 1L2 · Ph. 905-405-8272, Fax 905-405-1292
www.zurn.com

Rev. C
Date: 6/12/2018
C.N. No. 140146
Form No. FT757